

Weekly Cleaning Routine

May Be Done More Often If Necessary.

USE ONLY WARM WATER & MILD DETERGENT.

Do Not Use Abrasive Cleaners or Cleaning Pads on Machine.

To Empty Bowl:

Drain Product Until Completely Empty

TURN OFF POWER AND UNPLUG POWER CORD FROM WALL

To Remove Faucet Assembly:



With Hand on Handle (5.04), Remove Handle Pin (5.05)

With Hand under Faucet Assembly, Remove Handle (5.04)

With Finger Push Down On Tap Spring (5.06) & Tap Pin (5.07)

Wash Parts In Warm Cleaning Solution.

Rinse With Sanitizer.

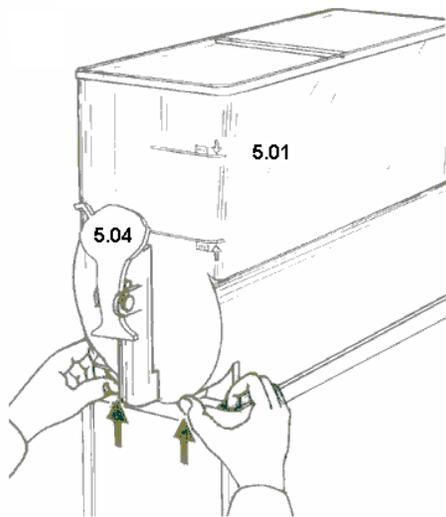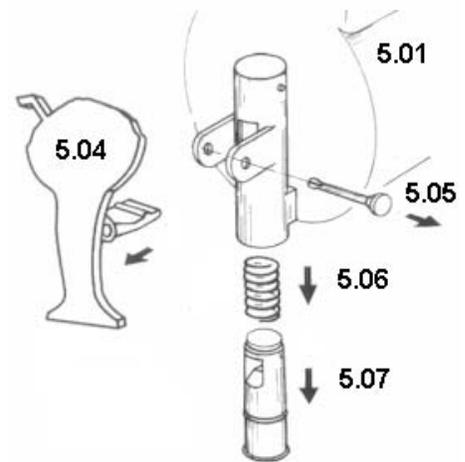

To Loosen Empty Bowl:

Turn Off Power And Unplug Power Cord From Wall.

Unplug Lid Power Cord (1.05) And Remove Lid.

Clean Lids with Warm Cleaning Solution.

Rinse with Sanitizer.

Raise Bowl At Front Until Legs Pop Out.

Slowly Remove Bowl (5.01).

Remove Hard Plastic Bowl Bushing (5.10) At Front Of The Bowl.

Soak Bushing In Bowl of Warm Cleaning Solution For 10 Minutes.

Wash Bowl Out With Non Abrasive Cloth.

Rinse With Sanitizer.

To Remove Spiral & Gaskets:


Slowly Remove Spiral (2.00)

Remove Suction Cap (2.05) From Spiral (2.00).

Remove Bowl Gasket (3.02) At Back Of Freezing Cylinders.

Wash Parts With Warm Cleaning Solution.

Rinse With Sanitizer.

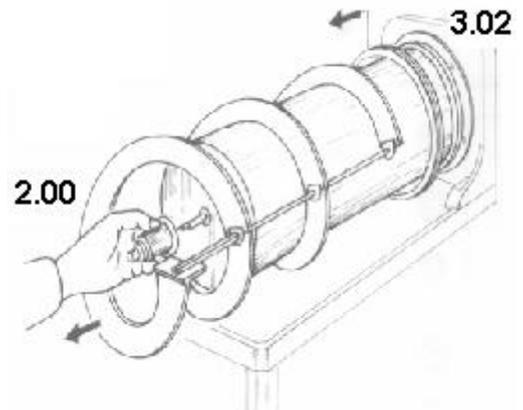

Weekly Cleaning Routine

May Be Done More Often If Necessary.

USE ONLY WARM WATER & MILD DETERGENT.

Do Not Use Abrasive Cleaners or Cleaning Pads on Machine.


To Remove Drip Trays:

Remove Grates (7.10).

Lift Drip Trays (7.09) Up and Out.

Clean With Warm Cleaning Solution.

Rinse With Sanitizer.

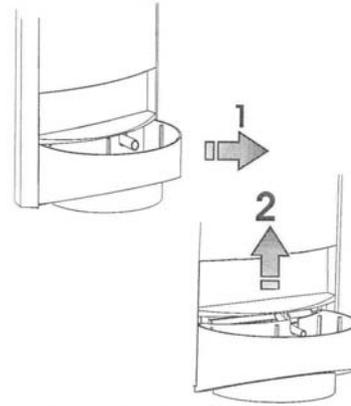

To Clean Base Unit:

Clean Freezing Cylinders & Condensation Pans (7.01) With Warm Cleaning Solution.

Wipe Down Rest of Base.

Sanitize Entire Base.

NOTE:

Allow To Dry Before Reassembly.